

USER MANUAL

WHITE NOISE MACHINE

Important: Read the user manual carefully
and keep it for future use.



moonboon
designed for better sleep

SPECIFICATIONS

Rated working voltage: DC5V

Rated Working current: 700mA

Rated power: 3,5W

Power supply: Built-in rechargeable lithium battery
Works with DC5V power supply

Light source: High photosynthetic efficiency semiconductor LED

Colour temperature: 3000 Kelvin (Warm)

Sleep sounds: 10 different relaxing sleep sounds




WHAT'S INCLUDED


- 1x White noise machine
- 1x USB charging cable

HOW TO USE THE WHITE NOISE MACHINE

The white noise machine must be charged for at least two hours before first use. To charge, reveal the USB output port at the top of the white noise machine by unfastening the rubber plug. Next, insert the USB charging cable into the charging plug and connect it to a power outlet with a voltage of 5V and a current of more than 1A. While charging, the charging light next to the USB output will light red. The battery is fully charged when this light turns green.

The battery fully charges in 3 hours. With a fully charged battery, the white noise machine can play for approximately thirty hours (20 hours when the light is simultaneously turned on).

The first time you turn the white noise machine on, press , hold for two seconds, and then press either  or  to play your first sound.

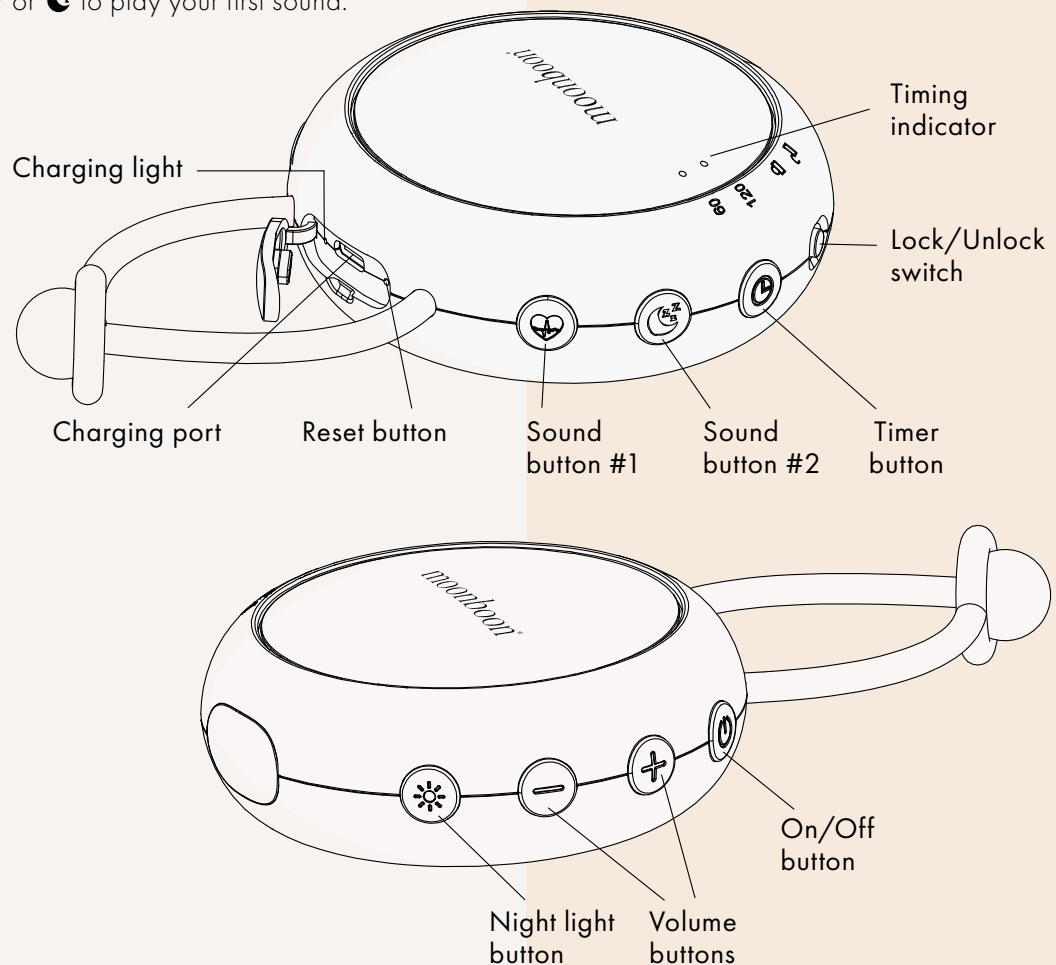

BUTTONS AND FUNCTIONS



ON/OFF BUTTON

Press and hold the button for two seconds to turn the white noise machine on. The white noise machine will play the sound it played before being turned off.

Press and hold the **ON/OFF** button for two seconds again, when you wish to turn the white noise machine off.



SOUND BUTTON 1 – WOMB SOUNDS

Press once to activate the sounds. Press the button again to cycle through to the next sound. See the section **SOUNDS** for a list of the different sounds.



SOUND BUTTON 2 – WHITE, PINK, AND BROWN NOISES

Press once to activate the sounds. Press the button again to cycle through to the next sound. See the section **SOUNDS** for a list of the different sounds.



VOLUME BUTTONS: "+" AND "-"

Press the buttons to adjust the volume setting. "+" increases the volume. "-" decreases the volume. Choose from five sound levels.



TIMER BUTTON

Adjust how long the white noise machine will be playing /will be turned on. Press to choose between the different timer programs:

- Default: No timer (will play until the battery runs out)
- Press the button once: 60 minutes
- Press the button twice: 120 minutes



A small blue light will light up and indicate the chosen timer setting. No light indicates that the timer is in Default mode.



NIGHT LIGHT BUTTON

Press and hold the button for two seconds to turn the night light on. Press and hold the button for two seconds again to turn the night light off.

Please note

Switch between  and  to lock and unlock your current settings. When in the locked position, it is not possible to change the settings.

Please note

Charge the machine if the light cannot turn on.

SOUNDS

Moonboon has developed a white noise machine specifically to help babies and children sleep better. The white noise machine comes with ten relaxing sleep sounds of varying intensity.



SOUND BUTTON 1 – WOMB SOUNDS

Has two relaxing sounds to resemble the sounds inside the womb. Choose from a mother's calming heartbeat, the sound of blood rushing through the body, and the mother's rhythmic breathing.

Press once to activate the sounds. Press the button to cycle through the following sounds:



Womb sounds

#1 Mom's heartbeat

#2 Womb sounds



SOUND BUTTON 2 – WHITE, PINK, AND BROWN NOISES

Features a selection of white, pink, and brown noises. Sounds that you would hear at home or in nature.

Press once to activate the sounds. Press the button to cycle through the following sounds:



White noises

#1 Tv static

#2 Boat motor

#3 Air conditioner



Pink noises

#4 Calm waves

#5 Rustling leaves in the wind

#6 Soft summer rain





Brown noises

#7 Thunder and rain

#8 Crackling bonfire

Please note

Switch between  and  to lock and unlock your current settings. When in the locked position, it is not possible to change the settings.

RESET SETTINGS

Unfasten the rubber plug at the top of the white noise machine to reveal the USB output port and the reset button. To reset to factory settings, insert a paper clip into the hole and press down for five seconds.

CLEANING SETTINGS

Clean the white noise machine with a damp cloth without soap or detergent. Do not use soap or other chemicals on the white noise machine. Keep the machine away from water and dirt.

DISPOSAL



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially adverse environmental and human health consequences.

SAFETY CHECKLIST

Carefully read the safety checklist below. When you have checked the list and verified that everything is as described, you may begin using the white noise machine. Enjoy!

- For indoor use only. Do not use it in direct sunlight, near an open fire, or close to heat-radiating products such as electric heaters.
- Do not use the white noise machine near water, such as a bathtub, swimming pool, faucet, or basin.
- It is not possible to replace the LED light inside the white noise machine. Instead, replace the whole white noise machine when the LED light stops working.
- After purchasing the product, please charge it for more than two hours before first use. It takes about three hours for the white noise machine to charge fully.
- Use the product frequently to make the best use of the internal battery. Charge the white noise machine every two months for three hours or more to ensure the longest possible battery life.
- The input voltage to the product is DC 5V 1A. Charge the machine with the charging cable that comes with the product to operate the product safely.
- Switch off the product after use.
- Do not place machines right next to a baby's ears.
- Do not drive or operate heavy machinery while listening to the white noise machine.
- If you have difficulty hearing or hear ringing in your ears, please immediately discontinue listening to the white noise sounds and consult an audiologist or your physician.
- Please consult your physician if you have significant difficulty sleeping regularly, experience fitful/restless sleep, or feel tired during the day.
- Moonboon's white noise machine is equipped with a lithium battery. When flying, it is recommended to keep devices with lithium metal or lithium-ion batteries (such as the white noise machine) in your carry-on luggage.

Please note

Make sure to check regularly that the white noise machine meets all safety requirements.

