

USER MANUAL

TRIPOD STAND

Important: Read the user manual carefully
and keep it for future use.



moonboon
designed for better sleep

WHAT IS INCLUDED?

- 1x Wooden top in walnut wood
- 6x Connecting leg pipes
- 3x Connecting leg pipes with finished ends ("feet")

ASSEMBLY


The stand is designed specifically for Moonboon's baby hammock, twin baby hammock and cradle. Use the stand with or without the Moonboon Motor. The stand has a maximum carry capacity of 28 kg (62 lbs).

1

The stand is easy to assemble. No tools are needed.


Start by assembling the individual legs. Each leg has 3 tube assembly parts. Starting with the foot-pipe, assemble one leg at a time.

1. Insert the metal shafts into the bearing;
2. Push the two parts together;
3. Twist into the locked position.

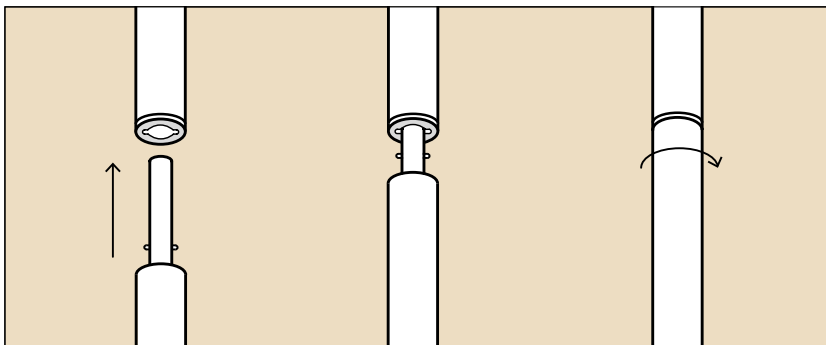

2

Attach the legs to the wooden top assembly with the eye bolt facing downwards. Ensure that each leg is firmly affixed and twisted into the locked position.

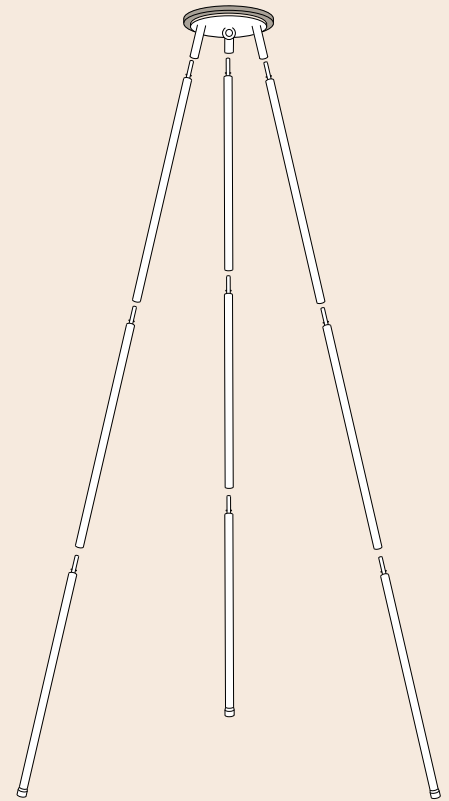

Please note

The tripod stand may only be placed on a flat floor. The maximum allowable slope of the surface is 0.15 degrees.

The flatness requirement is a maximum deviation of 2 mm (1/16 inch) over a distance of 2 meters (6.5 feet).

3 Firmly place the stand on the floor with the rubber soles of the flat-bottom feet on the floor surface. Place the legs as far apart as possible to achieve maximum balance. Avoid stressing the structure, and do not place the legs further apart than 130 cm (4.2 feet).

4 You are now ready to mount your Moonboon baby hammock or cradle. See the next section for details.

MOUNTING

MOUNTING A BABY HAMMOCK OR CRADLE

- Connect the hammock spring with a safety snap hook to the eye bolt on the wooden top assembly. Do not use any chain or mounting strap above the baby hammock/cradle.
- Please read the user manual for your baby hammock or cradle thoroughly before use.

MOUNTING A BABY HAMMOCK OR CRADLE AND A CRADLE BOUNCER

The stand is specifically designed for Moonboon's baby hammock or cradle in combination with either the Motor Connect or the Motor Original.

- First, attach the Motor Connect or Motor Original to the eye bolt of the stand using a safety snap hook. Next, attach the spring and then hang the baby hammock or cradle under the cradle bouncer, according to the product's user manual.
- Orient both snap hooks with the narrow end towards the cradle bouncer. Check that the snap hooks are hanging and locked correctly. Keep the power supply cord away from the baby hammock, cradle and the stand.
- Please read the user manual for your baby hammock/cradle and cradle bouncer thoroughly before use.

Please note


Only use a stainless-steel safety snap hook without coating for mounting the baby hammock, twin baby hammock, cradle, the Motor Original or the Motor Connect in the stand.

Please note

The tripod stand is designed for Moonboon's baby hammock, twin baby hammock, cradle, and cradle bouncers. We can't guarantee that products from other brands can be adequately mounted or will function correctly with the stand.

WARNING

- To avoid the stand tipping over or tilting, never push the baby hammock or cradle back and forth or use it as a swing or toy.

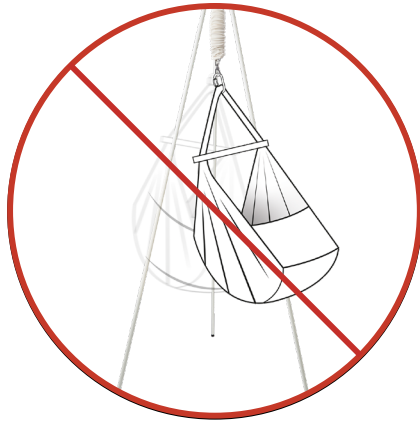

TRANSPORTATION

- Easily disassemble the stand for transport. Clear the parts from the eye bolt and put the stand on its side. Disassemble the leg for carrying.

Please note

Never move the stand when in use or while your baby is in the baby hammock or cradle.

Always turn off the cradle bouncer when making adjustments or moving the stand.

CHANGING OUT A PLASTIC PART

Replacing the plastic part on one of your stand legs is a quick and easy process. Before you begin, make sure you have the new plastic part ready at hand.

- To start, disassemble the stand to make the replacement process both easier and safer.
- Find the small round dot near the plastic fitting on the stand leg. Press the dot inward with a pen or similar tool. While continuing to press down, use pliers to gently pull out the plastic part. Be careful not to scratch the paint on the stand leg.
- Take the new plastic part and align the locking mechanism with the hole on the stand leg. Press it in until you hear a click, ensuring that the locking mechanism is securely fastened in the hole.

Once the new plastic part is securely in place, reassemble the stand and it will be ready for use again.

